


ASSEMBLY INSTRUCTIONS FOR THE PG02501 VIBRATION DAMPER

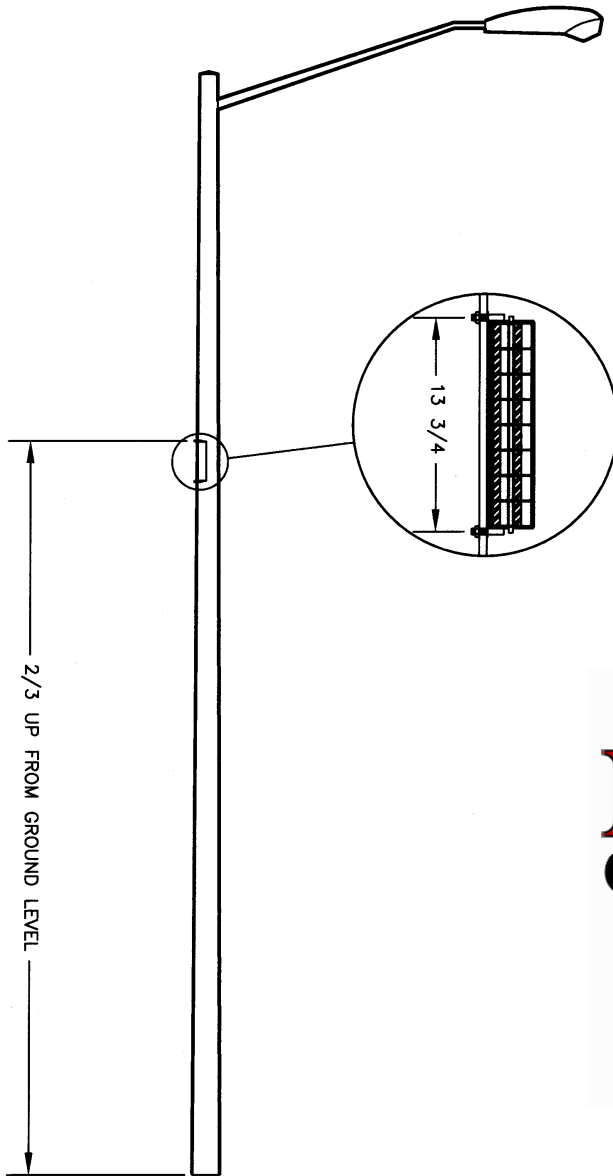

DELTECH
MANUFACTURING INCORPORATED

Precision • Quality
Dependability

3910 Oaklawn Drive Louisville, KY 40219-2719
(502) 962-3500 FAX (502) 962-3503

(888) 258-0533

FOR YOUR SAFETY READ ALL INSTRUCTIONS CAREFULLY

*NOTE IF YOU ARE MISSING HARDWARE OR HAVE ANY FIT UP PROBLEMS PLEASE CONTACT DELTECH TOLL FREE (888) 258-0533

ASSEMBLY INSTRUCTIONS FOR THE PG02501 VIBRATION DAMPER

TOOLS REQUIRED:

- 1) 9/16" WRENCH

INSTRUCTIONS:

- 1) THE VIBRATION DAMPER CAN BE INSTALLED INSIDE OR OUTSIDE THE POLE. (INSIDE IS RECOMMENDED FOR COSMETICS.)
- 2) DRILL 2 HOLES 1/2" DIAMETER 13 3/4" APART 2/3 UP FROM GROUND LEVEL ON THE POLE.
- 3) REMOVE THE HANDHOLE COVER ON THE POLE. YOU WILL NEED SOME WIRE OR SOMETHING TO RAISE THE DAMPER IN THE POLE AT THE LEVEL OF THE 1/2" HOLES. THE BEST WAY TO DO THIS IS TO RUN THE WIRE THROUGH THE TOP HOLE YOU DRILLED, DOWN THE POLE TO THE HANDHOLE COVER. THERE IS A HOLE IN THE TOP STUD OF THE DAMPER TO ATTACH TO THE WIRE.
- 4) ONCE THE STUDS ARE IN POSITION INSTALL THE WASHERS AND THE NUTS.
- 5) REMOVE THE WIRE AND REPLACE THE HANDHOLE COVER.

